

# follow me momo.

## Follow me right to the sea!



### I am your clever parent-child

**tandem coupling.** I do everything I can to make sure you can go on excursions without everyone else! Using me, your **momo tricycle** can be coupled to your parents' bicycles. That's really easy and possible on almost any bicycle using adaptors. Once mounted, I can be connected in only a few steps and without requiring tools – also spontaneously during an excursion, for example if you get tired or if the traffic is making you feel insecure. And after a brief break, you can set off again independently!



### One-off preparation on the tricycle.



Using me, you can easily and securely couple yourself onto your parents' bikes if you get tired, have no strength left or if the traffic gets too risky.





# follow me momo.



**Low tare weight**  
for lightweight, permanent transport on an adult bicycle.

## Different adapters

facilitates installation onto bicycles with hub or derailleur gears and quick-release levers, or with solid axles and nuts and with a hub gear and Clickbox.

## Yoke

fits onto all 26"- and 28" adult bicycles.

## Clamping plate


can easily be adjusted to tricycle size.

## Main bar

secures the axle adapter and the transport height

## Pivot

provides safety. In this way, the tricycle and the parent bicycle can tilt independently of each other.

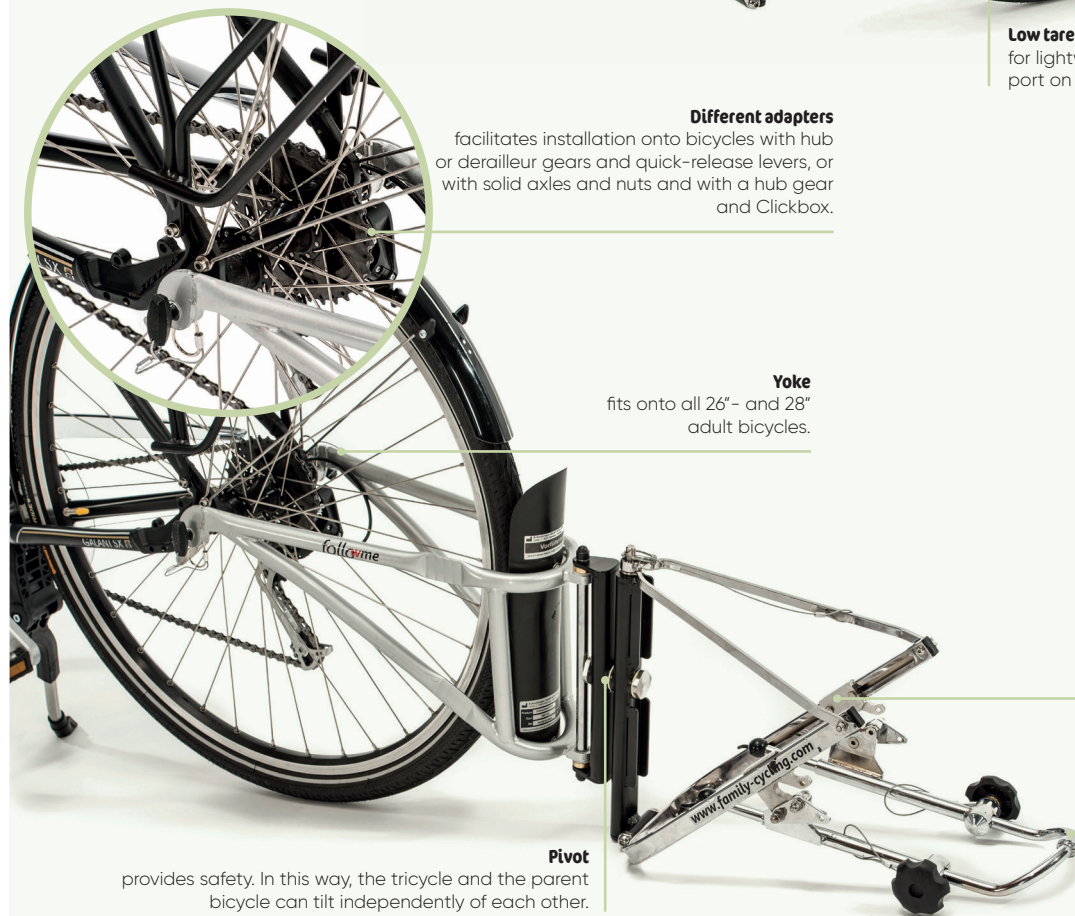





Data	Size 1	Size 2	Size 3
Required size of the leading bicycle	26" - 28"	26" - 28"	26" - 28"
Max. tricycle size	12" (can also be used for 16" + 20")	16" + 20"	24" + 26"
Max. traction weight	40 kg	60 kg	80 kg
Weight	5.1 kg	5.1 kg	8.7 kg